


Mounting Top Mount Crown

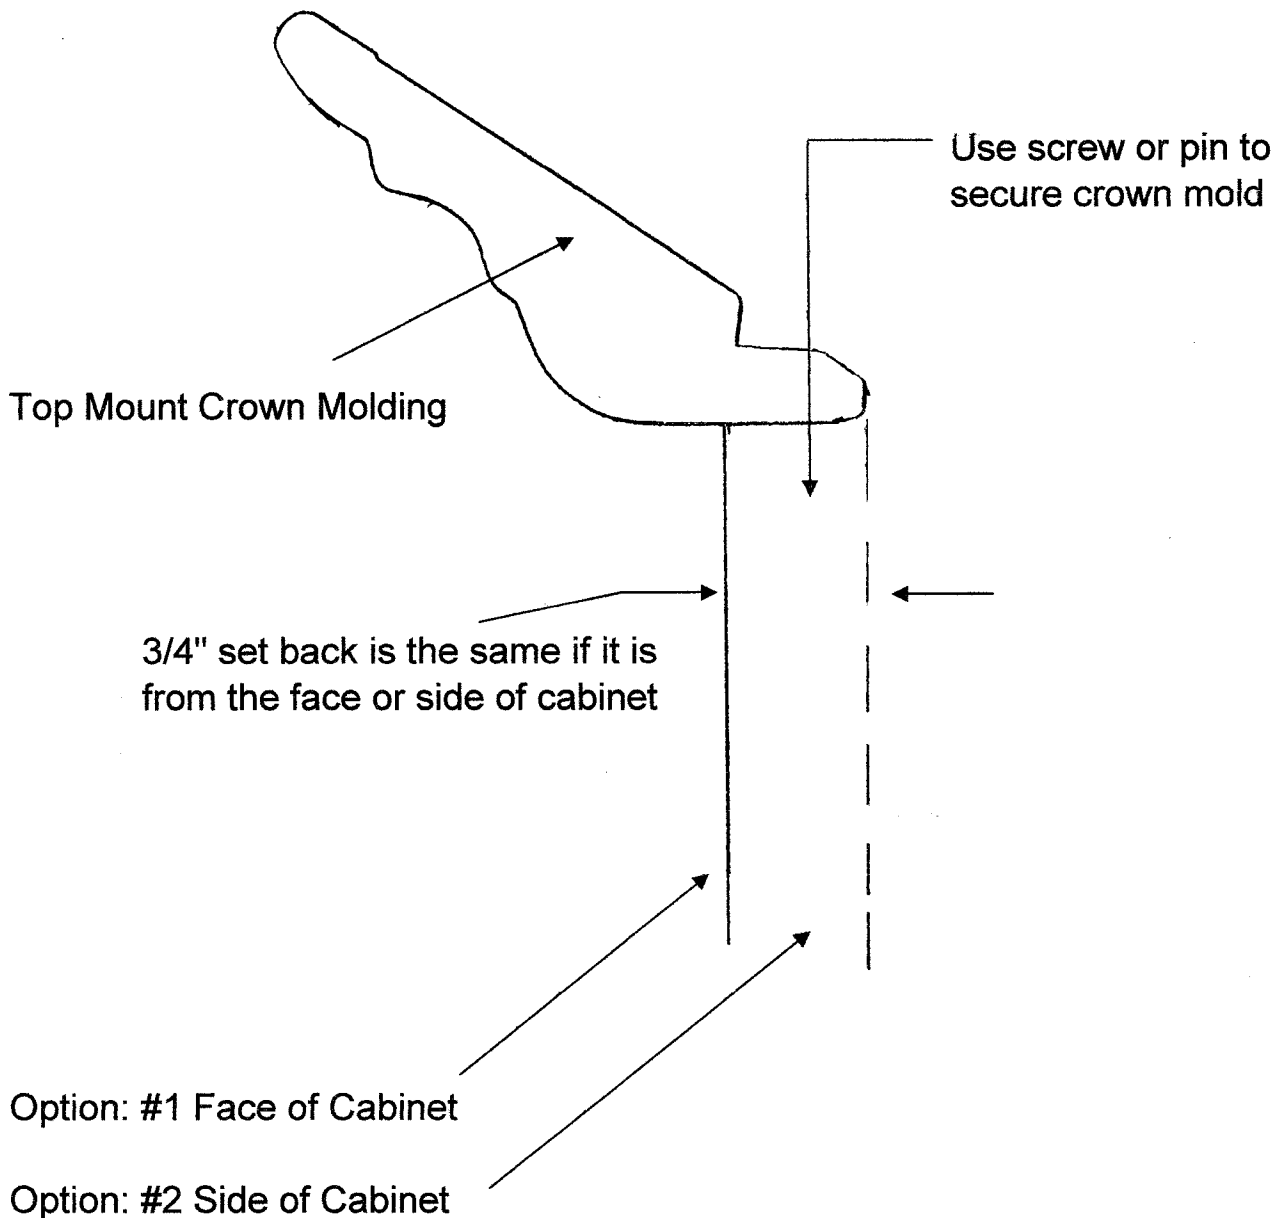

Note: The procedure for mounting the crown molding is the same for both Option #1 & #2. You will set the crown molding back from the edge of the Face or Side of the cabinet by 3/4". Using a screw or pin gun and secure the crown to the top of the cabinet.

Architectural Cabinetry & Furniture Mfg., Inc
790 Big Tree Drive ** Longwood, FL 32750
407-331-0600 ** 1-888-Diy-Beds *** 1-888-349-2337